

1/11


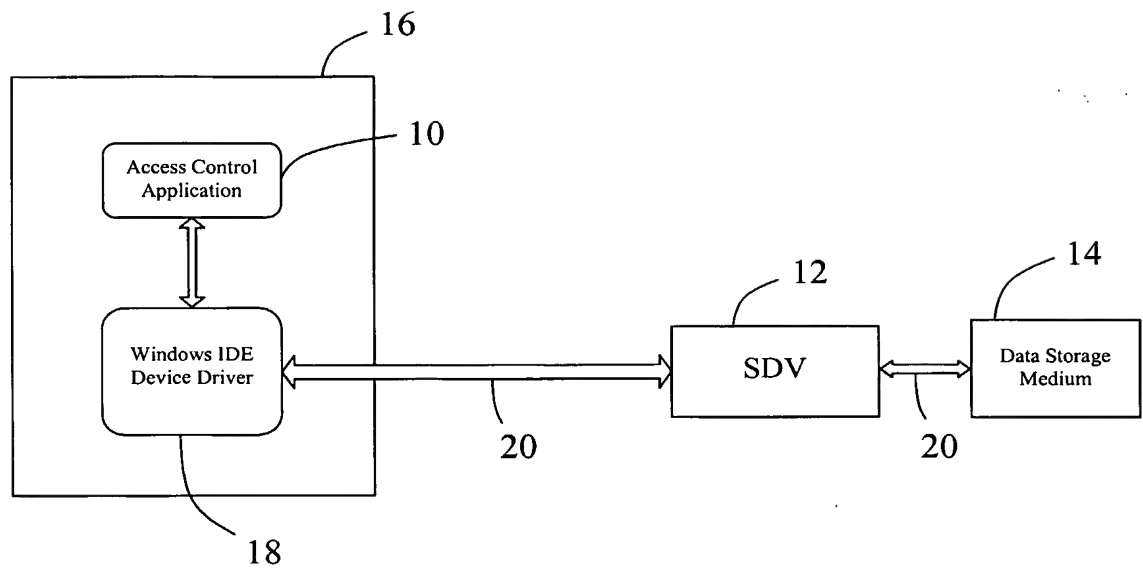


Fig. 1

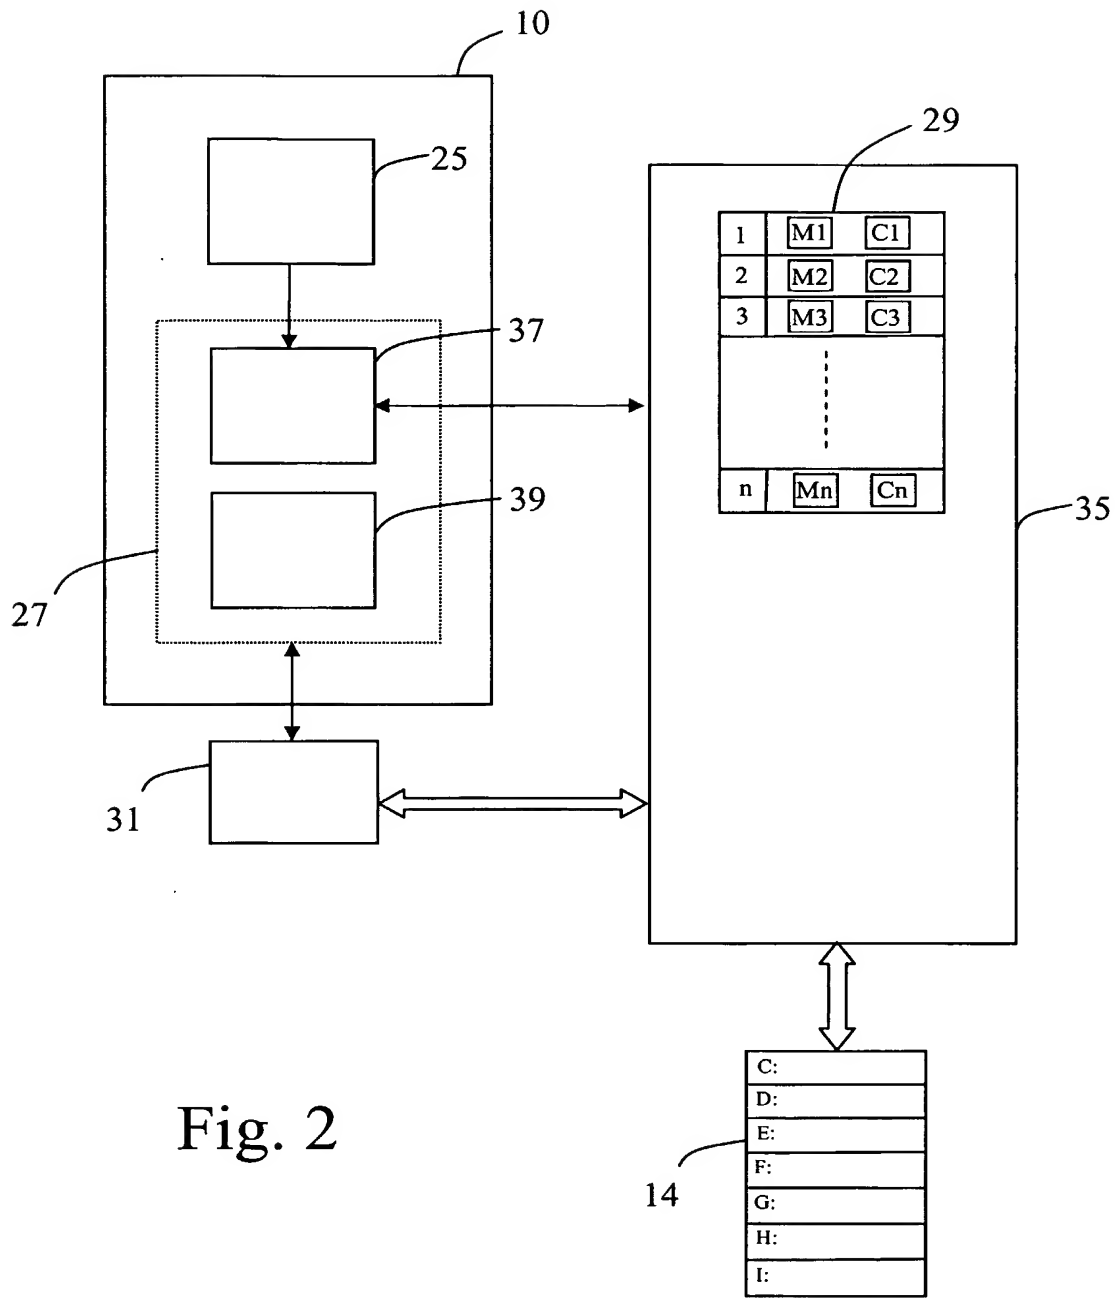

3/11

40

42 44 46

Partition Access Control					
No.	Drive Letter	Partition Size	Bootable Partition?	Partition Access Control	Current Permissions
1	Local Disk (C:)	2,996 MB	YES	Disable on this Partition	Read/Write
2	Local Disk (E:)	502 MB	NO	Enable	Read/Write
3	Local Disk (F:)	596 MB	NO	Enable	Read/Write
4	Local Disk (G:)	699 MB	NO	Enable	Read/Write <input checked="" type="checkbox"/>
5	Local Disk (H:)	800 MB	NO	Enable	Read Only
6	Local Disk (I:)	902 MB	NO	Enable	Read/Write
					Write Only
					No Access

Fig. 3

4/11

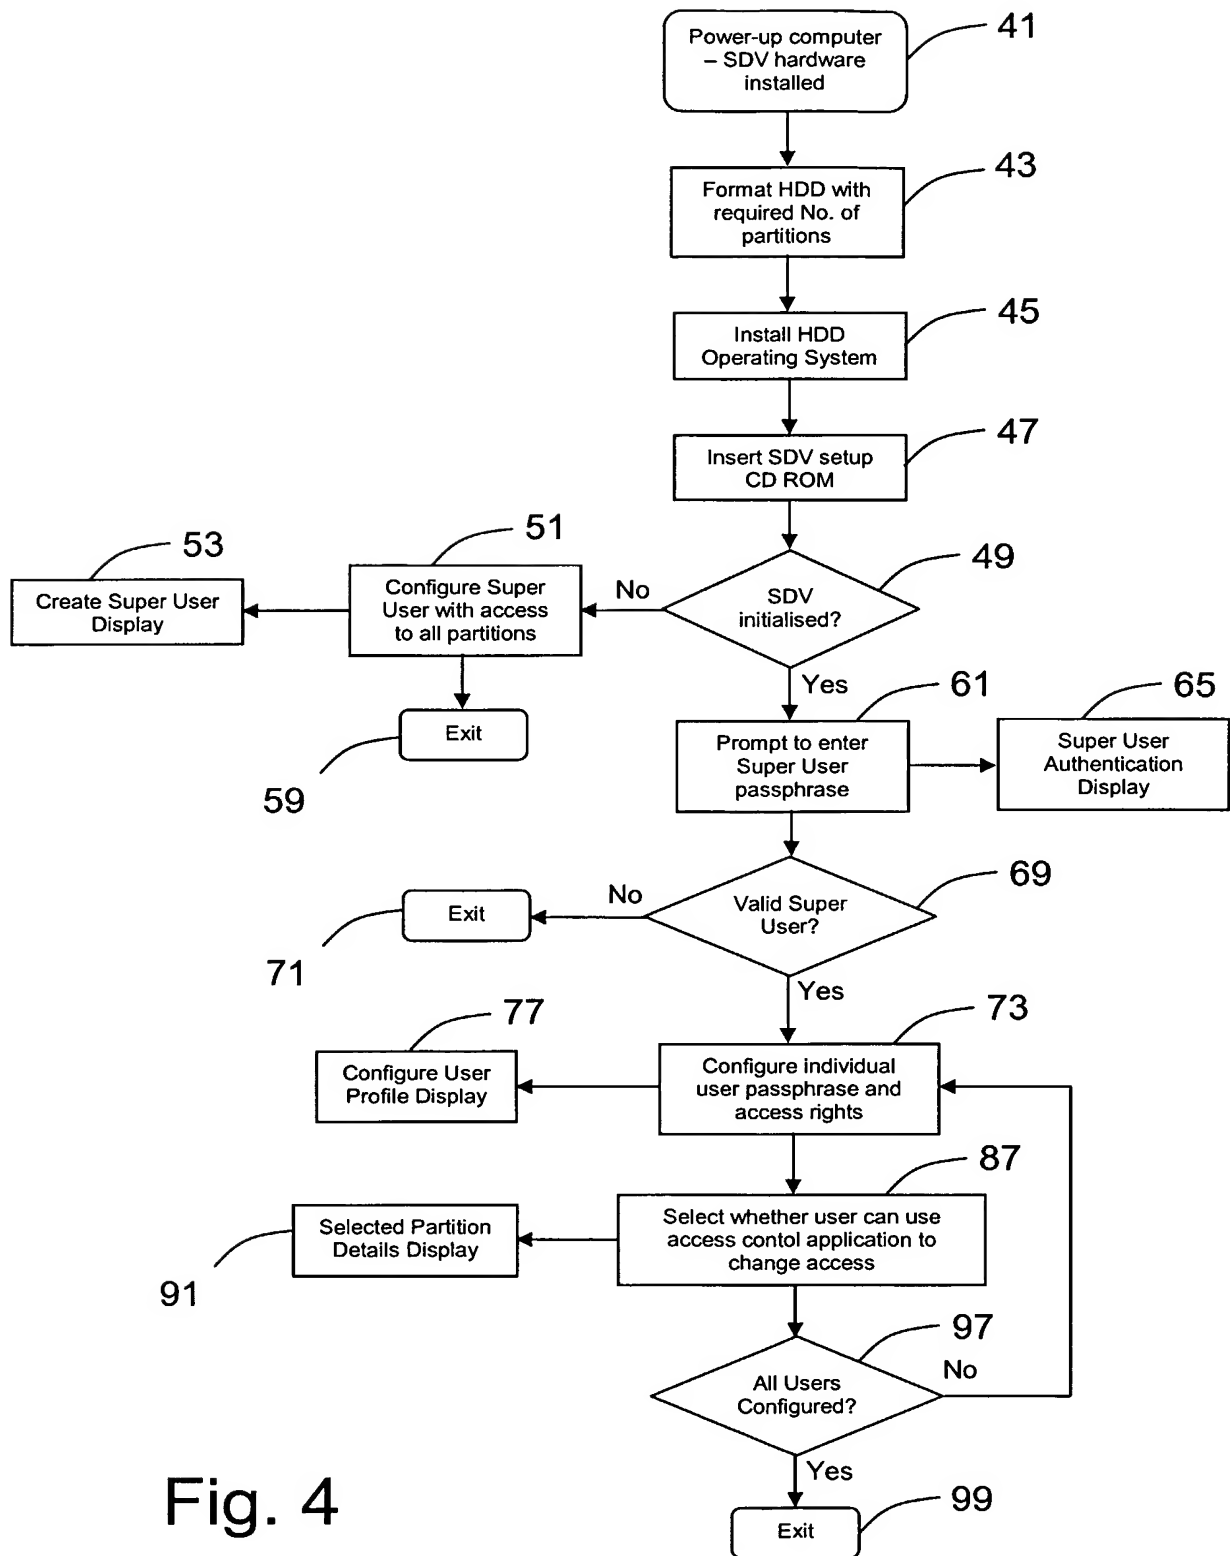


Fig. 4

5/11

55

Create Super User Account

User Name	User 1
New Password	*****
Confirm Password	*****
<input checked="" type="checkbox"/> Enable	
Access Control Password	*****
Confirm Access Control Password	*****
Identity String	User 1Profile

57

Finish

Fig. 5

63

User Authentication

User Name	
Pass Phrase	*****

67

Authenticate

Fig. 6

6/11

75

Configure User Profile

User Name

User 1

New Password

Confirm Password

Access Control Password

Confirm Access Control Password

Identity String

User 1Profile

Select partitions from here

79

Boot Partition

PRI DOS 2.0 0004E753-00056595

PRI DOS 2.0 000564D5-0005E217

PRI DOS 2.0 000E257-00065F99

PRI DOS 2.0 00065FD9-0005DD1B

PRI DOS 2.0 0006DD5B-00075A9D

PRI DOS 2.0 00075ADD-0007D81F

81

Boot Partition

PRI DOS 2.0 000E257-00065F99

PRI DOS 2.0 00065FD9-0005DD1B

PRI DOS 2.0 00075ADD-0007D81F

83

Save

85

Main Menu

Fig. 7

7/11

75

Configure User Profile

User Name

New Selected Partition Details

Con Start Sector LBA

Acc Size (Mbytes)

Con Access Mode ▼

Iden Access Control Mode ▼

93 OK Cancel 95

79

81

83 Save 85 Main Menu

79

81

83

85

Fig. 8

8/11

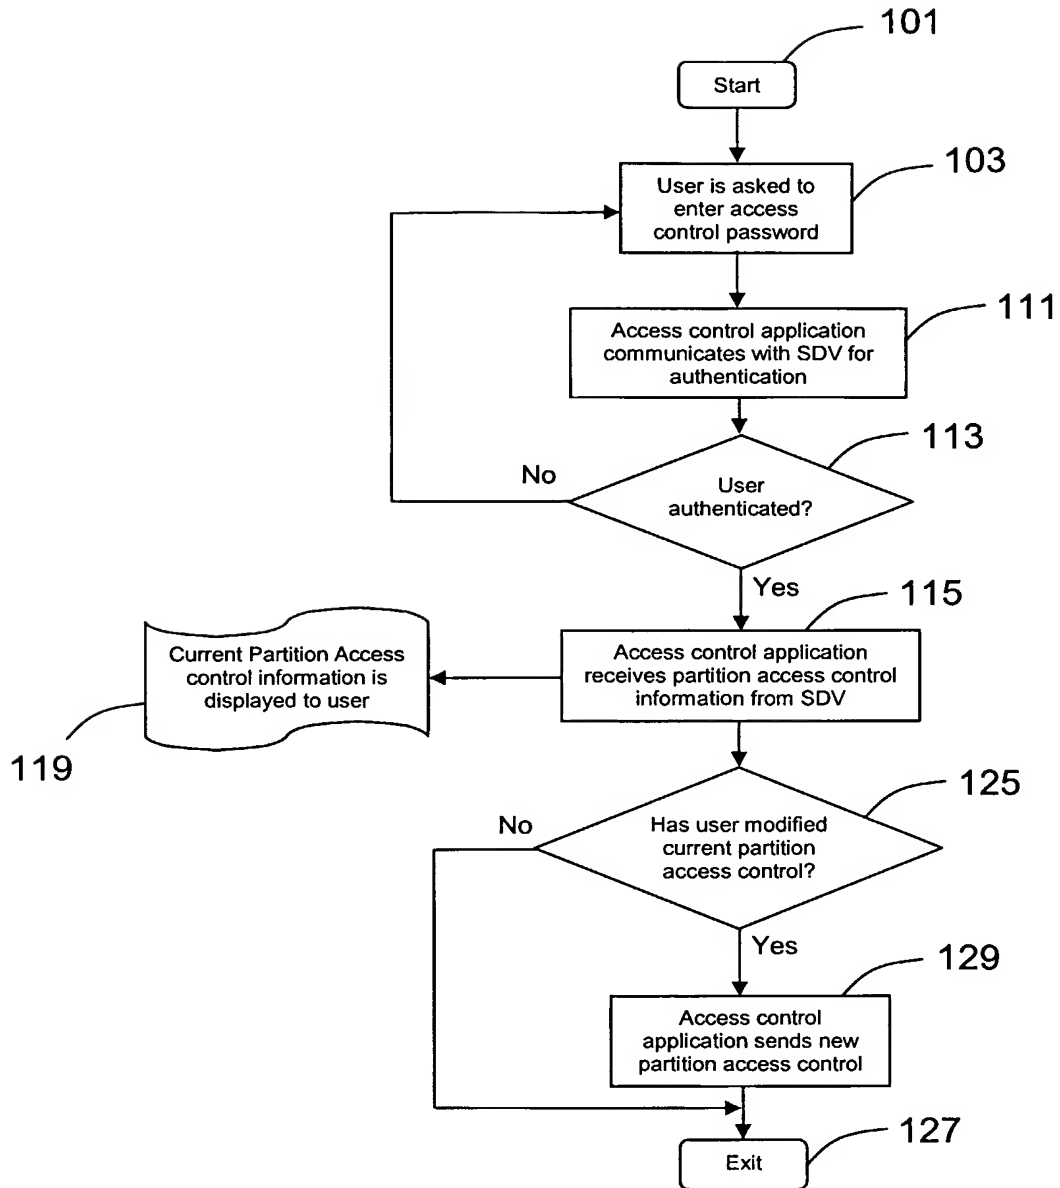


Fig. 9

9/11

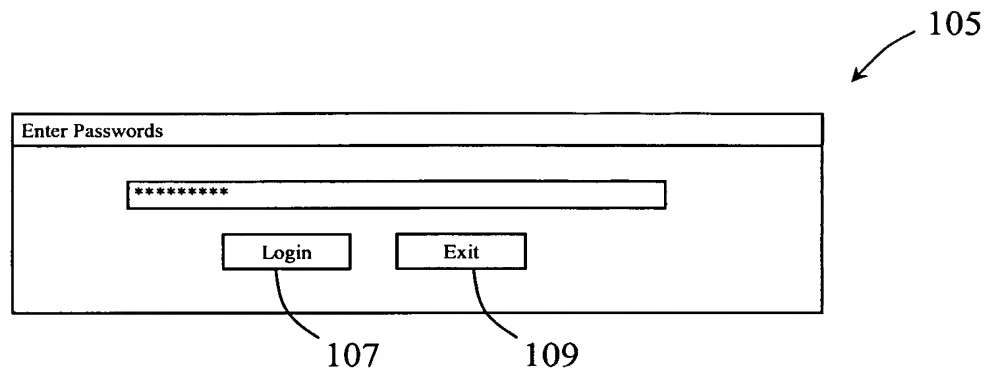


Fig. 10

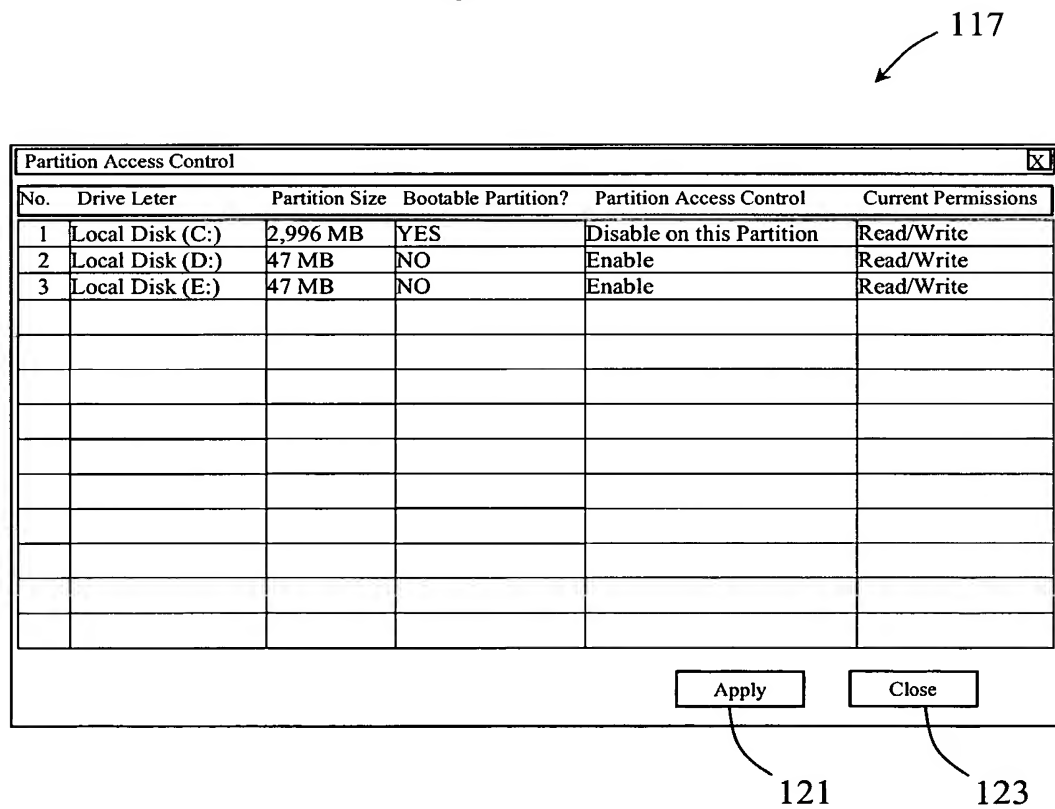


Fig. 11

10/11


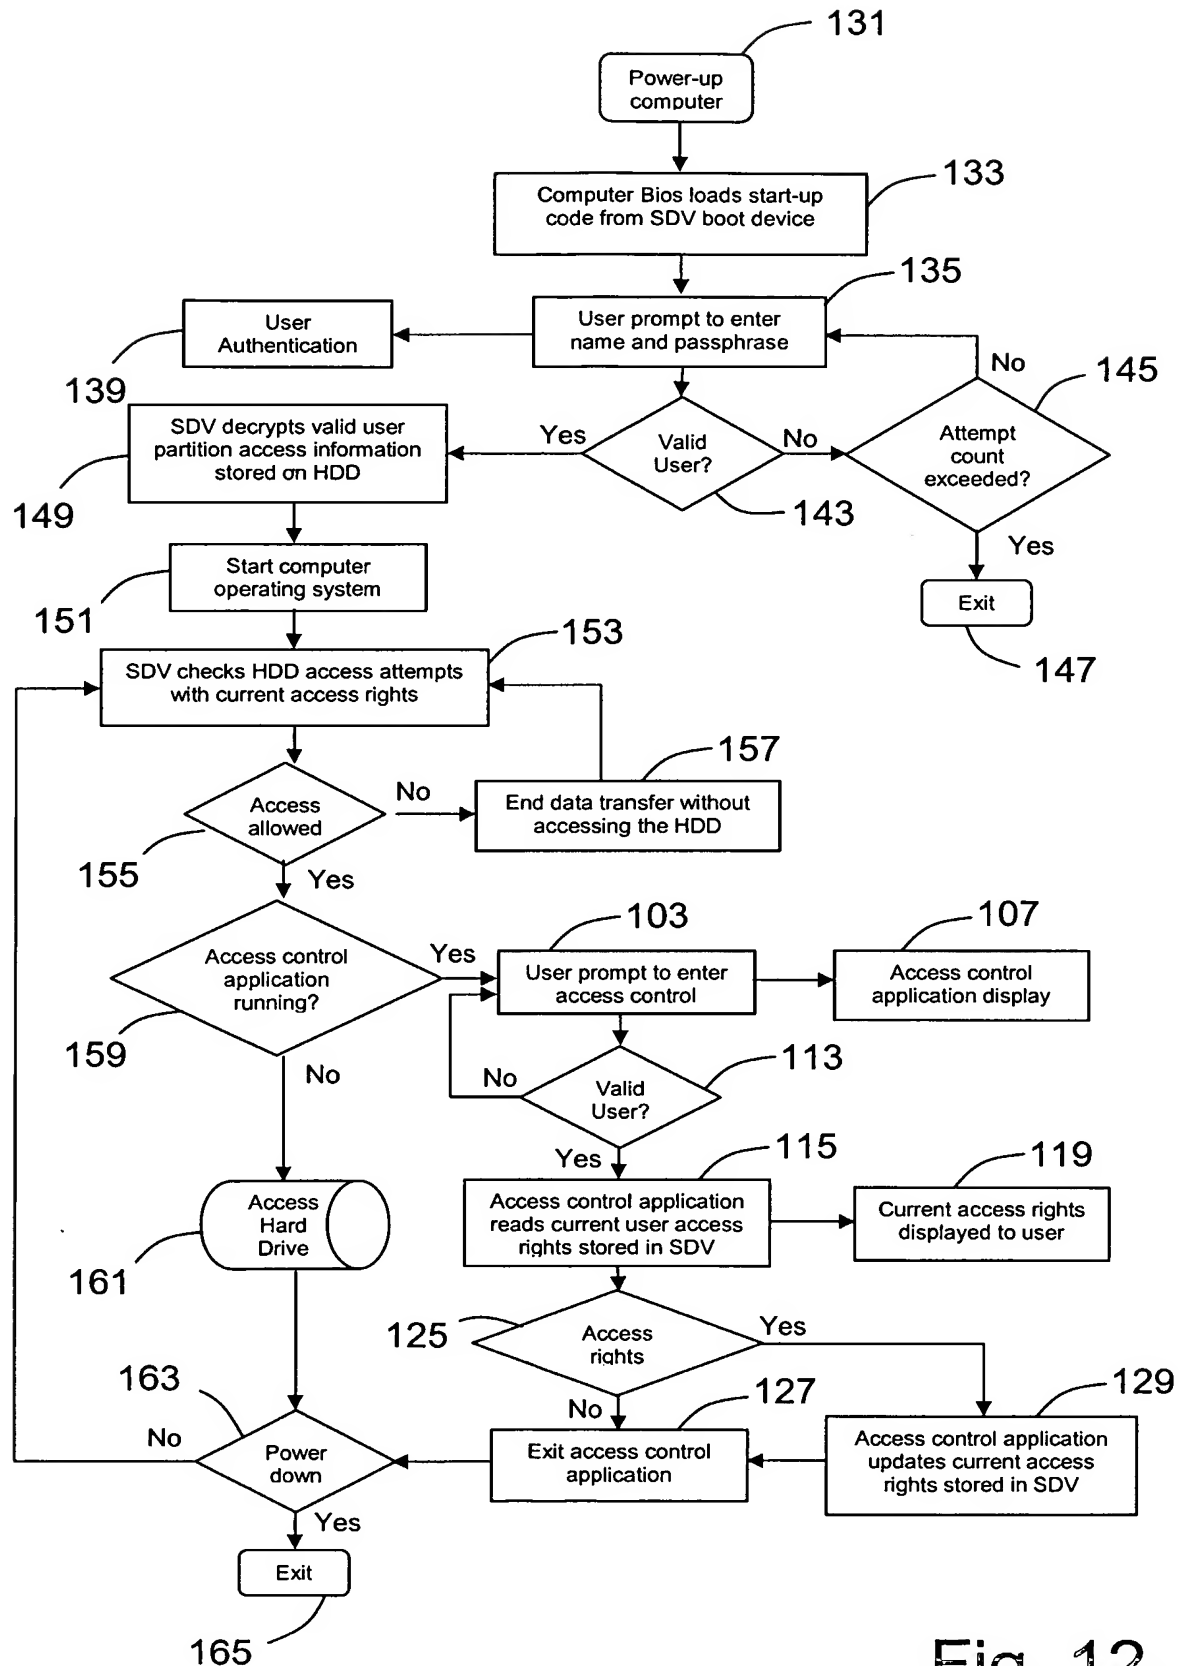


Fig. 12

11/11

137

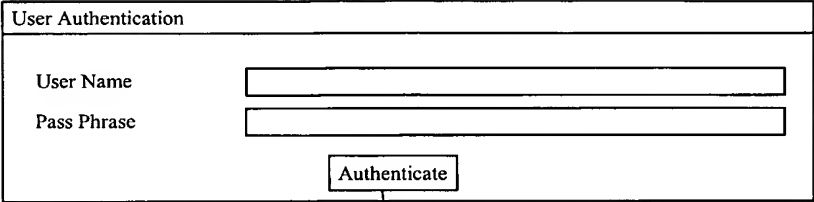

The diagram shows a rectangular box representing a user authentication form. At the top left of the box is the text "User Authentication". Below this, on the left side, are the labels "User Name" and "Pass Phrase". To the right of "User Name" is a horizontal input field. To the right of "Pass Phrase" is another horizontal input field. Below these two input fields is a button labeled "Authenticate".

141

Fig. 13